TECHLITE | ACOUSTICS™

UNFRAMED ASSEMBLY GUIDE

PARTS

		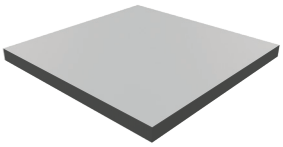
DRYWALL SCREW (X VARIES)	VELCRO PAD (X VARIES)	FOAM (X1)

TOOLS NEEDED

DRILL

SCREWDRIVER

TAPE MEASURE

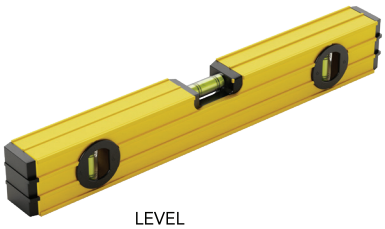

LEVEL

STEP 1

Prep the Wall for Installation: Clean the wall surface to remove any dirt or grime before installation.

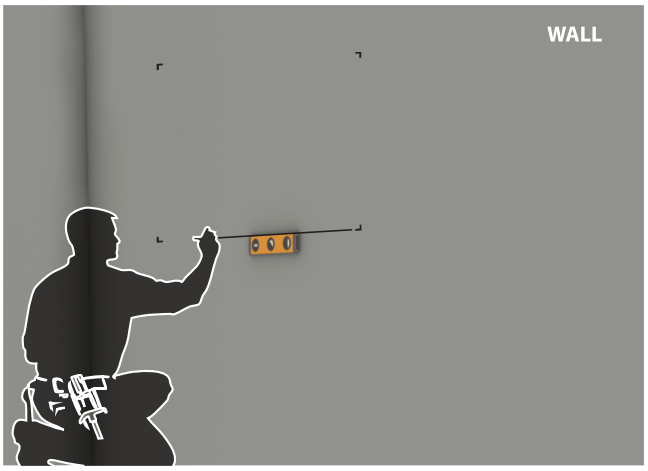

STEP 2

Alignment: Using a level, draw a small guideline along the bottom edge where the foam will be placed. Mark the outer corners as well to ensure accurate positioning and proper alignment during installation.

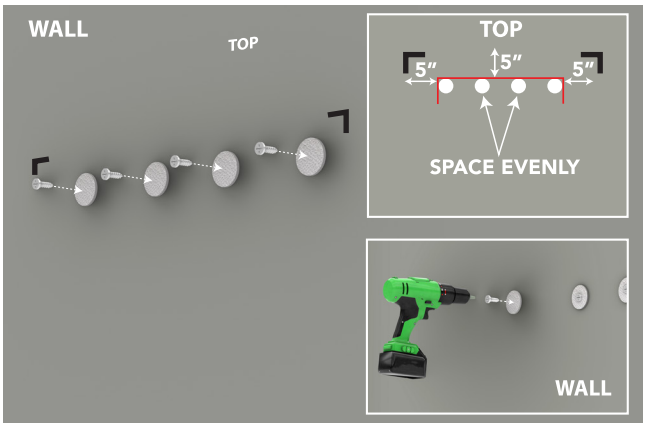

STEP 3

Attach the velcro Pads to the wall: Attach only the top row of velcro pads to the wall; the remaining pads will be applied to the panel in Step 4. Position each pad as shown and secure it with screws, tightening until the screw heads are nearly flush with the surface.

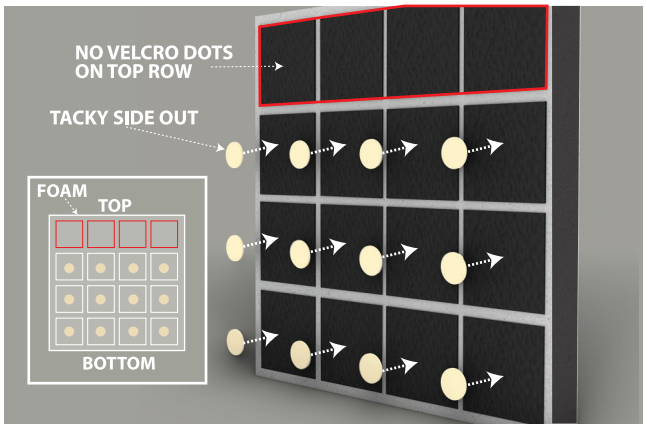

STEP 4

Align and attach the velcro pads: Align and attach the velcro pads to the back of the panel as shown. Position each pad and press it firmly onto the foam's velcro surface, ensuring the tacky side faces outward for proper mounting.

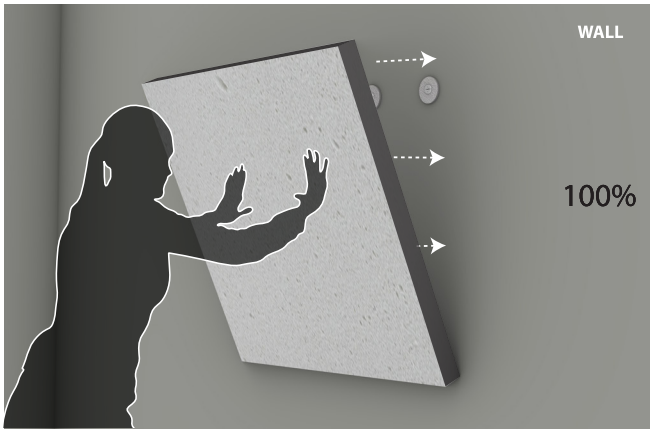

STEP 6

Mount the foam panel: First, remove the release film from the velcro pads. Tilt the top of the panel slightly toward you, then set the bottom edge along the marked alignment lines. With the bottom edge in place, tilt the top inward until the panel is vertical and all velcro pads are fully engaged. Once secured, **ENJOY**!