



REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED

INSTALLATION INSTRUCTIONS:

1. CUT A SLIT IN THE END CAP SO THAT IT CAN BE INSTALLED OVER THE EXISTING PIPE
2. CUT A HOLE IN THE CENTER OF THE END CAP SLIGHTLY LARGER THAN THE PIPE OD
3. USE FASTENER WELD TO ATTACH THE END CAP TO THE PIPE INSULATION
4. SLIDE THE INSULATION UP AGAINST THE PIPE HANGER
5. USE RTV TO SEAL THE CENTER OF THE END CAP TO THE PIPE TO CREATE A MOISTURE BARRIER

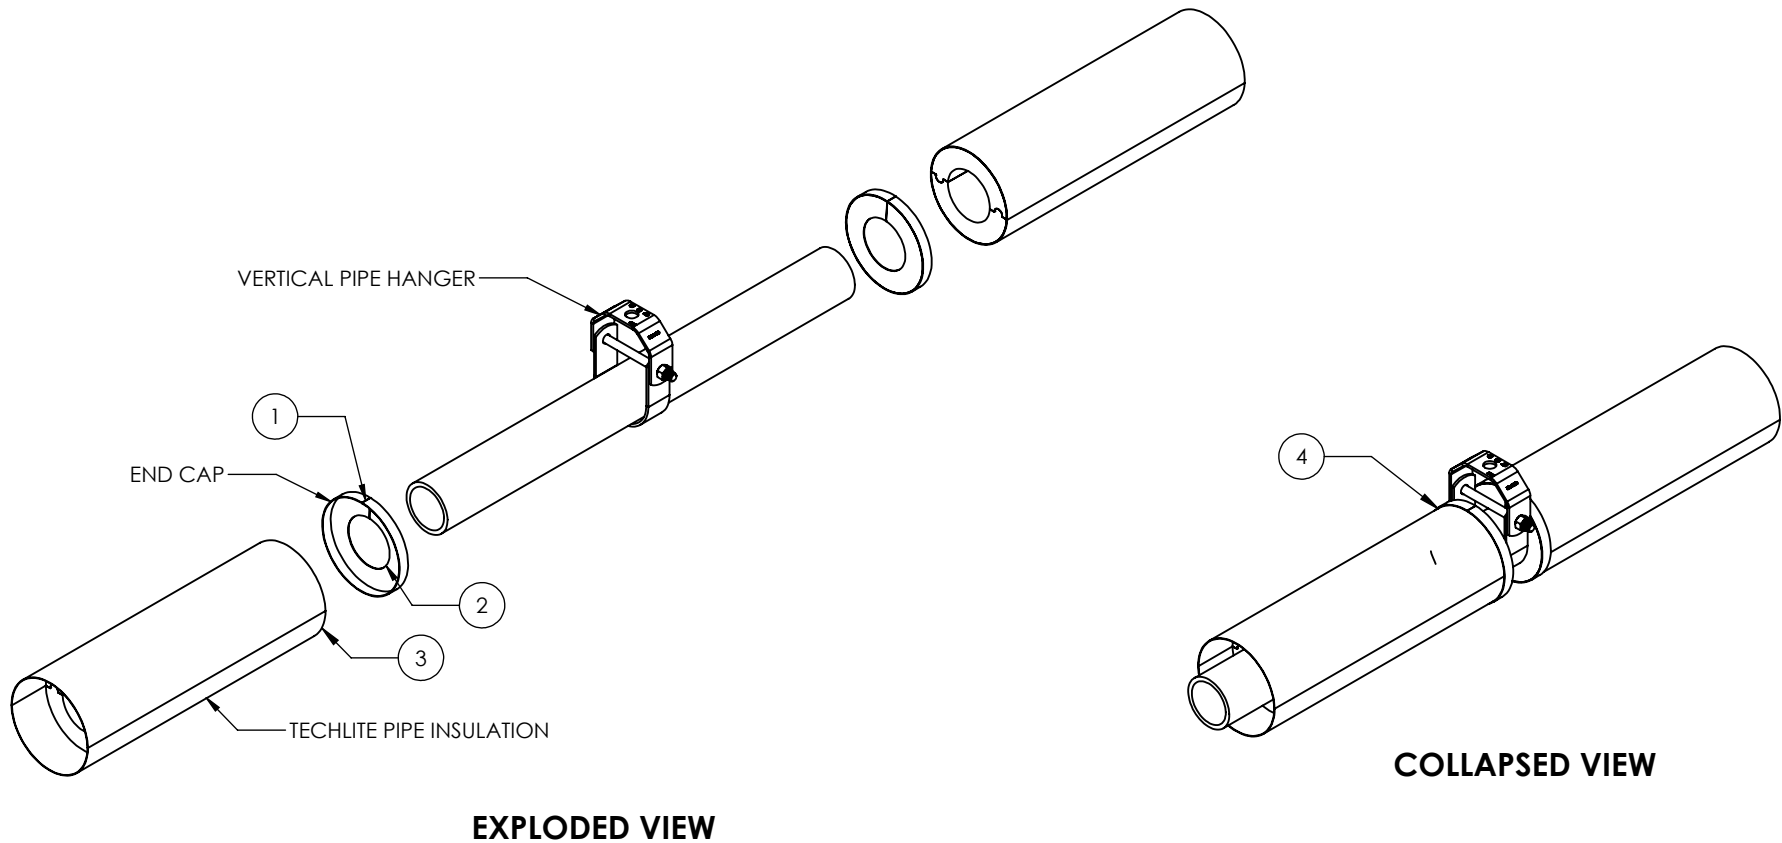

TECHLITE FOAM CAN EXPAND UP TO 4% DUE TO HUMIDITY AND TEMPERATURE
DIMENSIONS REFLECT FACTORY CONDITIONS

PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF ACCESSIBLE PRODUCTS CO. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF ACCESSIBLE PRODUCTS CO. IS PROHIBITED.		UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL $\pm 1/16$ ANGULAR $\pm 1^\circ$ TWO PLACE DECIMAL ± 0.01 THREE PLACE DECIMAL ± 0.005		 2212 W. 5th Pl., Tempe, AZ 85268	
				DESCRIPTION	
FINISH	-	NAME	DATE	SIZE	DWG. NO.
DO NOT SCALE DRAWING	DRAWN	K. SLOCUM	7/2/2013	A	HANGER INSTALL
				SCALE:	-
					SHEET 1 OF 1